



NEW 4406 QUICK START GUIDES

Step 1: Connect all cables as shown below; then turn power on.

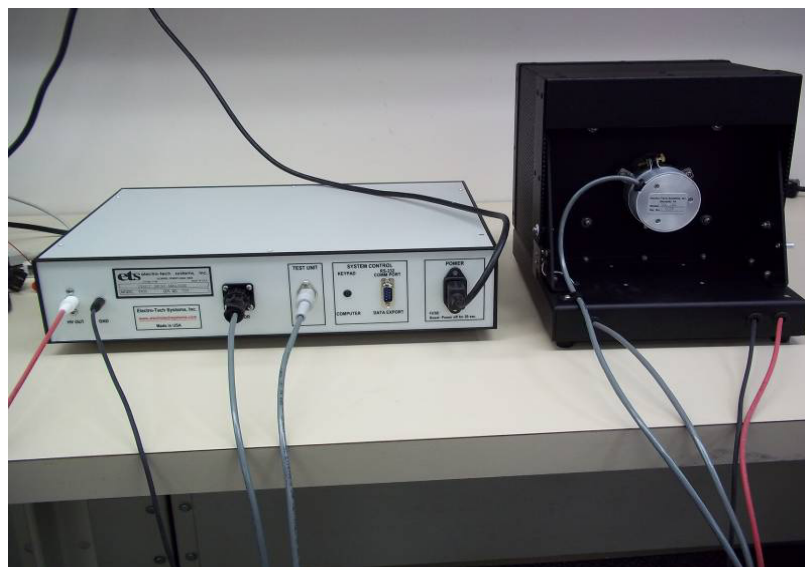


Step 2: Open Faraday cage cover and install STM-2 module as shown below

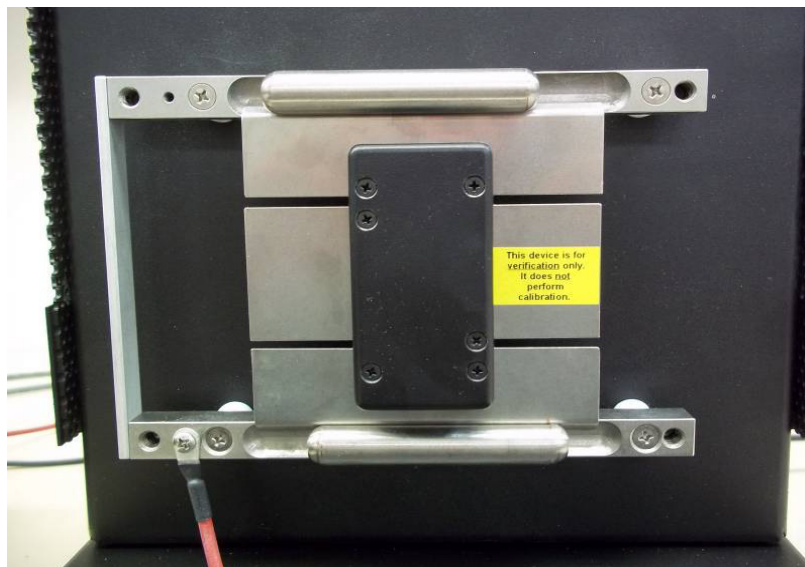

Step 3: Close Faraday cage cover as shown below




Step 4: Press "SYSTEM TEST" to run balance tests (see below)

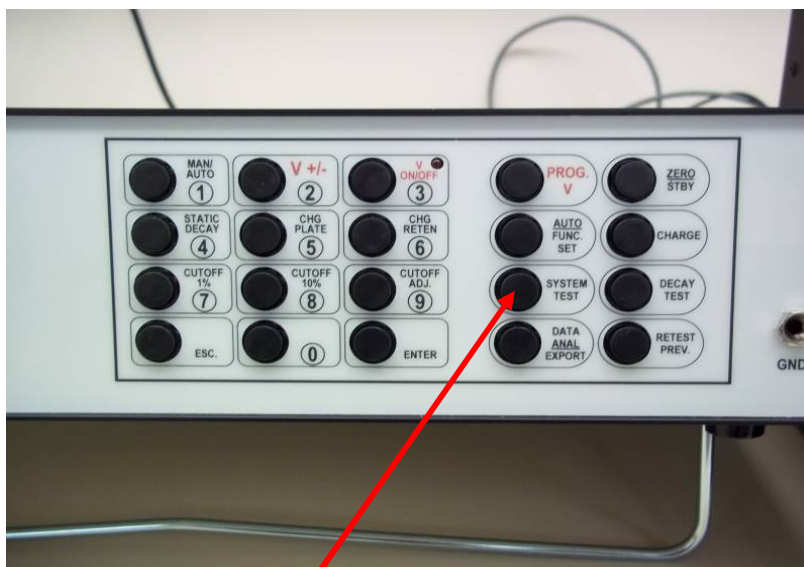


This button

Step 5: Wait until "**SYSTEM TEST**" shows "**Passed**" (see below)

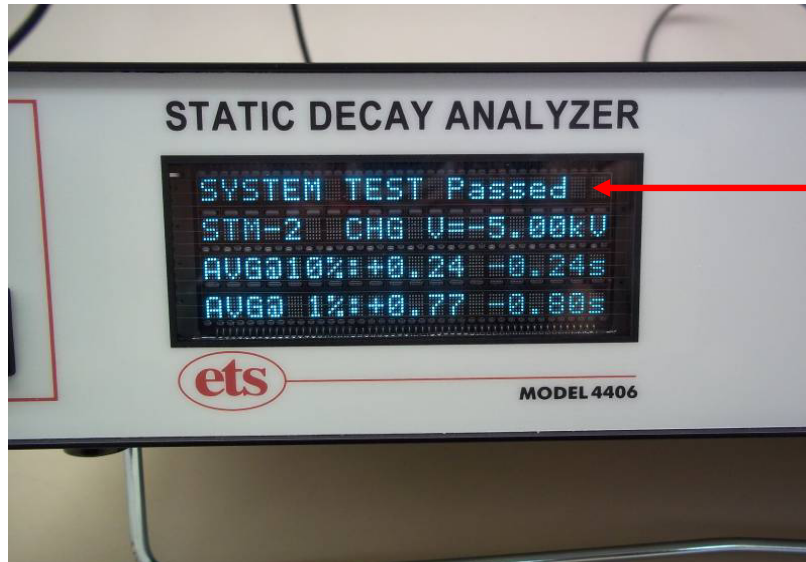


Step 6: Press "**MAN/AUTO**" to go to AUTO mode (see below)


This button

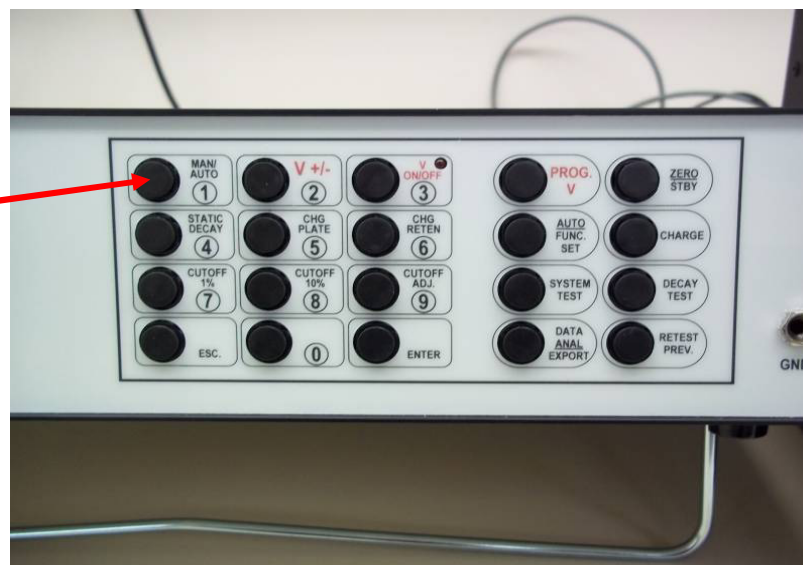


Step 7: Make sure display shows AUTO mode (see below)

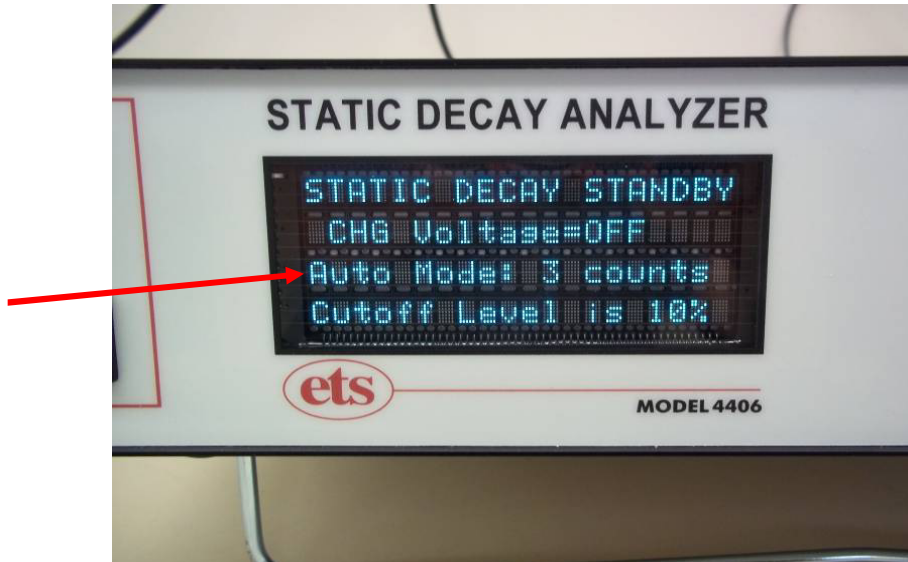

Step 8: Install test sample (see below); then close Faraday cage cover.

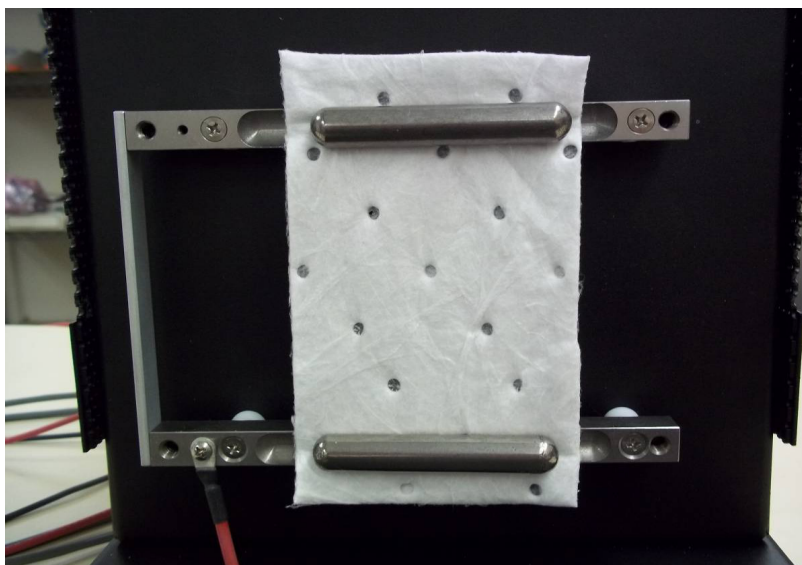


Step 9: Press "**DECAY TEST**" to start AUTO tests (see below)

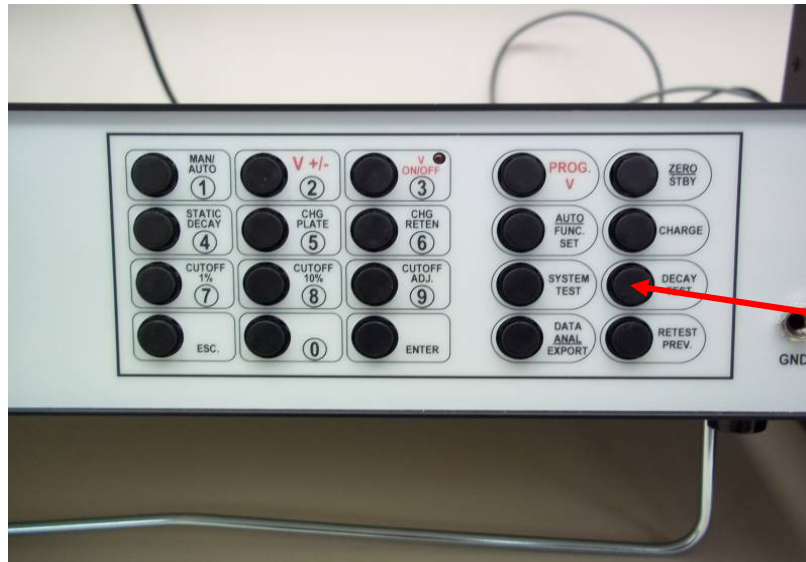

This button

Step 10: Wait for "**Test Over**" (see below); record data then repeat Step 8 for the next sample and so on.

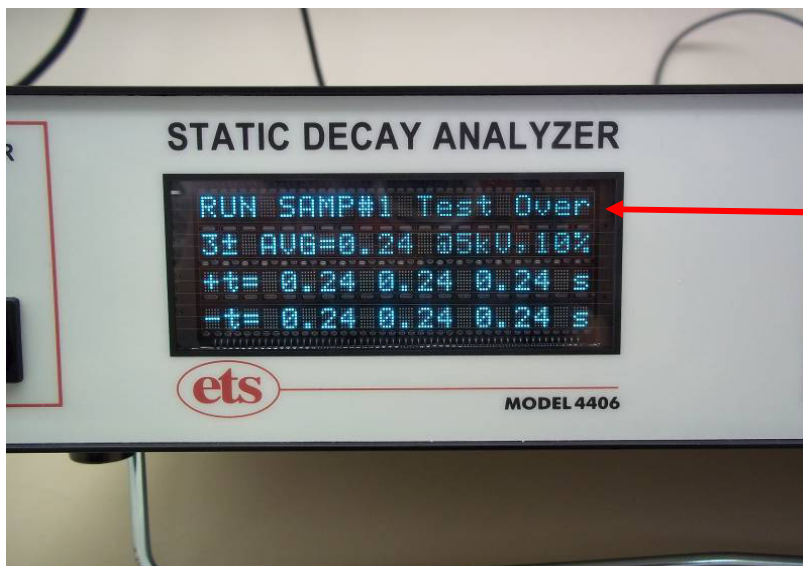

For further testing, consult **USER MANUAL**